

## HL 600 (Jumbo) Drifter Parts for Tamrock

TAMROCK

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
	HL600(JUMBO)		<b>099 912 43</b>	<b>HYDRAULIC ROCK DRILL HL600</b>			
2	HL600(JUMBO)		099 905 18	gear housing assy	1		
3	HL600(JUMBO)		180 456 58	front cover assy	1		
6	HL600(JUMBO)		180 454 08	rotation bushing assy	1		10KG
7	HL600(JUMBO)		180 453 78	body assy	1		
15	HL600(JUMBO)		093 322 38	idle gear assy	1		
16	HL600(JUMBO)		093 313 58	flushing device	1		
17	HL600(JUMBO)		093 329 28	tie rod	4		
18	HL600(JUMBO)		097 666 08	pin	1		
21	HL600(JUMBO)		097 665 78	coupling	1		1.72KG
22	HL600(JUMBO)		097 672 08	connecting piece	1		
23	HL600(JUMBO)		<b>093 314 88</b>	<b>bearing bushing</b>	1		
24	HL600(JUMBO)		093 316 38	ring	2		
25	HL600(JUMBO)		093 311 08	chuck	1		
27	HL600(JUMBO)		851 068 09	locking washer pair	2		
28	HL600(JUMBO)		087 718 08	u-seal	4		
30	HL600(JUMBO)		800 452 99	bolt	2		
31	HL600(JUMBO)		800 538 69	bolt	4		
32	HL600(JUMBO)		800 824 29	bolt	4		
33	HL600(JUMBO)		801 777 39	nut	2		
35	HL600(JUMBO)		442 776 90	bolt	2		
36	HL600(JUMBO)		088 228 98	ring	1		
37	HL600(JUMBO)		522 745 90	o-ring	1		
40	HL600(JUMBO)		801 518 59	o-ring	1		
42	HL600(JUMBO)		801 368 49	o-ring	1		
43	HL600(JUMBO)		819 533 39	o-ring	1		
44	HL600(JUMBO)		522 077 80	o-ring	3		
45	HL600(JUMBO)		857 318 99	o-ring	2		
48	HL600(JUMBO)		814 840 09	bearing	2		
50	HL600(JUMBO)		800 347 99	bonded seal	1		
52	HL600(JUMBO)		088 229 18	bushing	2		
53	HL600(JUMBO)		800 323 69	adapter	1		
54	HL600(JUMBO)		800 330 99	adapter	1		
57	HL600(JUMBO)		811 279 89	cap	2		
58	HL600(JUMBO)		811 281 79	cap	2		
59	HL600(JUMBO)		812 611 29	cap	1		
60	HL600(JUMBO)		<b>819 529 99</b>	<b>bearing</b>	1		0.6KG
61	HL600(JUMBO)		<b>093 323 68</b>	<b>bearing</b>	1		0.7KG
62	HL600(JUMBO)		810 352 99	plug	3		
63	HL600(JUMBO)		801 031 49	bonded seal	4		
64	HL600(JUMBO)		088 233 68	bushing	4		
65	HL600(JUMBO)		853 807 59	o-ring	1		

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
67	HL600(JUMBO)		814 068 19	spring pin	4		
69	HL600(JUMBO)		150 294 08	seal	1		
71	HL600(JUMBO)		153 779 88	hydr.motor assy	1		
72	HL600(JUMBO)		800 331 19	adapter	2		
73	HL600(JUMBO)		807 135 39	adapter	1		
74	HL600(JUMBO)		800 348 19	bonded seal	3		
	HL600(JUMBO)		858 966 59	seal kit			
	HL600(JUMBO)		099 912 43				
1	HL600(JUMBO)		099 908 08	cylinder assy	1		
5	HL600(JUMBO)		180 457 88	cover spacer assy	1		
10	HL600(JUMBO)		097 055 08	rear cylinder	1		
11	HL600(JUMBO)		097 085 28	rear cylinder	1		
12	HL600(JUMBO)		096 714 18	distributor	1		0.5KG
13	HL600(JUMBO)		097 048 78	piston	1		7.5KG
14	HL600(JUMBO)		097 049 08	front cylinder assy	1		
29	HL600(JUMBO)		800 196 59	bolt	1		
38	HL600(JUMBO)		801 496 49	o-ring	1		
40	HL600(JUMBO)		801 518 59	o-ring	4		
41	HL600(JUMBO)		819 532 09	o-ring	1		
43	HL600(JUMBO)		819 533 39	o-ring	2		
44	HL600(JUMBO)		522 077 80	o-ring	3		
46	HL600(JUMBO)		819 539 09	seal	2		
47	HL600(JUMBO)		850 814 59	seal	2		
49	HL600(JUMBO)		800 349 49	bonded seal	2		
51	HL600(JUMBO)		812 608 09	plug	2		
62	HL600(JUMBO)		857 137 29	plug	1		
63	HL600(JUMBO)		801 802 69	bonded seal	1		
65	HL600(JUMBO)		856 811 29	o-ring	1		
68	HL600(JUMBO)		092 564 78	bearing bushing	1		
70	HL600(JUMBO)		801 849 99	spring pin	2		
77	HL600(JUMBO)		<b>806 449 29</b>	<b>plug</b>	1		
	HL600(JUMBO)		858 966 59	seal kit			
	HL600(JUMBO)		099 912 43				
8	HL600(JUMBO)		097 343 18	accumulator H.P.assy	1		
9	HL600(JUMBO)		097 344 48	accumulator L.P.assy	1		
34	HL600(JUMBO)		802 198 29	bolt	8		
41	HL600(JUMBO)		819 532 09	o-ring	2		
83	HL600(JUMBO)		092 602 98	diaphragm	2		0.02
84	HL600(JUMBO)		807 590 69	valve	2		0.04
85	HL600(JUMBO)		808 010 69	o-ring	2		
86	HL600(JUMBO)		522 134 90	o-ring	2		
	HL600(JUMBO)		<b>858 966 59</b>	<b>seal kit</b>			
	HL600(JUMBO)		099 912 43				
4	HL600(JUMBO)		099 909 28	rear cover assy	1		
19	HL600(JUMBO)		088 237 78	washer	4		
20	HL600(JUMBO)		087 732 68	nut	4		
40	HL600(JUMBO)		801 518 59	o-ring	1		

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
49	HL600(JUMBO)		800 349 49	bonded seal	6		
50	HL600(JUMBO)		800 347 99	bonded seal	4		
51	HL600(JUMBO)		812 608 09	plug	4		
54	HL600(JUMBO)		800 330 99	adapter	1		
55	HL600(JUMBO)		087 790 68	adapter H.P	1		
56	HL600(JUMBO)		087 791 98	adapter L.P	1		
57	HL600(JUMBO)		811 279 89	cap	1		
59	HL600(JUMBO)		812 611 29	cap	2		
62	HL600(JUMBO)		857 137 29	plug	1		
63	HL600(JUMBO)		801 802 69	bonded seal	1		
70	HL600(JUMBO)		801 849 99	spring pin	1		
79	HL600(JUMBO)		093 330 98	bushing	2		
80	HL600(JUMBO)		<b>088 243 78</b>	bushing	2		
81	HL600(JUMBO)		810 491 29	plug	3		
	HL600(JUMBO)		858 966 59	seal kit			
	HL600(JUMBO)		153 779 88				
1	HL600(JUMBO)		445 821 60	socket screw	1		
2	HL600(JUMBO)		085 391 68	ring	1		
3	HL600(JUMBO)		090 296 58	gear	1		
4	HL600(JUMBO)		816 858 49	bolt	6		
5	HL600(JUMBO)		091 384 28	cover	1		
6	HL600(JUMBO)		816 859 79	o-ring	1		
7	HL600(JUMBO)		815 874 49	circlip	1		
8	HL600(JUMBO)		816 860 39	seal	2		
10	HL600(JUMBO)		867 623 79	hydraulic motor	1		
11	HL600(JUMBO)		800 118 39	o-ring	1		
	HL600(JUMBO)		<b>817 979 79</b>	seal kit	1		