

COP 1032 Drifter Parts for Atlas Copco

Atlas Copco

No	Crawler Drill	Drifter	Part Number	Part Name	Q'ty	Unit Price	Remarks
1				COP 1032HD R32/COP 1032HD R38 : rock drills			
2		COP 1032	3115 1576 00	front head	1		
3		COP 1032	3115 1620 00	guide (R32)	1		1.8kg
4		COP 1032	3115 1873 00	guide (R38)	1		
5			0667 3215 00	cup seal (R32)	4		
6		COP 1032	0665 1000 65	cup seal (R38)	3		
7		COP 1032	0663 2143 00	o-ring	3		
8		COP 1032	3115 2080 00	flushing head (R32)	1		
9		COP 1032	3115 2081 00	flushing head (R38)	1		
10		COP 1032	0663 2144 00	o-ring	2		
11			3115 1622 00	stop ring (R32)	1		
12		COP 1032	3115 1875 80	stop ring (R38)	1		
13		COP 1032	0663 2143 00	-o-ring (R38)	1		
14			3115 1577 80	cover, compl	1		
15		COP 1032	-	-cover	1		
16		COP 1032	0666 7190 01	-seal ring	1		0.06kg
17		COP 1032	0663 6150 00	o-ring	1		
18		COP 1032	0663 2117 00	o-ring	1		
19			0102 0460 00	cylindrical pin	4		
20		COP 1032	0663 2126 01	o-ring	3		
21		COP 1032	9000 0344 00	hexagon nipple	1		
22		COP 1032	9000 0325 00	hose nipple	1		
23		COP 1032	9000 0333 00	coupling nut	1		
24		COP 1032	3115 1623 00	side bolt	2		
25		COP 1032	3115 0287 00	washer	4		0.04kg
26		COP 1032	3115 0286 00	dome nut	4		0.26kg
27			7803 3588 01	shank adapter (32) L=340	1		
28		COP 1032	7804 3575 01	shank adapter (38) L=340	1		
29		COP 1032	3115 2065 00	driver	1		3115 0790 00
30		COP 1032	3115 0297 01	shims, 0.10mm	A)		0.1
31		COP 1032	3115 0297 02	shims, 0.15mm	A)		0.15
32		COP 1032	3115 0297 03	shims, 0.5mm	A)		0.5
33			0509 0223 00	roller bearing 32018XQ	1		1.8kg
34		COP 1032	3115 0789 00	rotation chuck	1		
35			0509 0222 00	roller bearing	1		
36		COP 1032	0291 1180 01	lock nut	2		
37		COP 1032	3115 1012 80	gear housing, compl	1		
38		COP 1032	-	-gear housing	1		
39		COP 1032	0544 2162 00	-lubricating nipple	1		
40		COP 1032	0686 6101 00	-plug	1		
41			0666 7188 01	-seal ring	1		0.04
42		COP 1032	0663 2129 00	-o-ring	1		

No	Crawler Drill	Drfter	Part Number	Part Name	Q'ty	Unit Price	Remarks
43		COP 1032	3115 0971 00	-bushing	1		
44		COP 1032	0516 4045 00	-needle bearing	1		
45		COP 1032	0516 4135 01	-inner ring	1		
46		COP 1032	0516 4139 01	-inner ring	1		
47		COP 1032	0516 4049 00	-needle bearing	1		
48		COP 1032	3115 1650 00	washer	1		
49			3115 0804 00	gear	1		
50		COP 1032	3115 1653 00	coupling	1		
51		COP 1032	3115 1017 00	spacer ring	1		
52		COP 1032	3176 6565 00	nipple	2		
53			3715 0597 00	cap	3		
54		COP 1032	3115 0839 80	hydraulic motor	1		
55		COP 1032	0147 1418 03	screw	2		
56		COP 1032	3115 0791 00	rotation chuck bushing	1		0.96kg
57		COP 1032	3115 0792 00	damping piston	1		1.12kg
58		COP 1032	-	set of seals	1		
59		COP 1032	3115 1011 00	intermediate part	1		
60		COP 1032	-	set of seals	1		
61		COP 1032	3115 1014 80	seal housing front, compl	1		1.28kg
62		COP 1032	-	-seal housing, front	1		
63		COP 1032	3115 0844 00	-set of seals	2		
64		COP 1032	3115 0795 00	-piston guide, front	1		
65		COP 1032	0663 2101 68	o-ring	4		
66		COP 1032	3115 1029 00	piston	1		3kg
67		COP 1032	3176 6352 00	nipple	1		
68		COP 1032	3176 5429 00	cap	1		
69		COP 1032	3715 0585 00	nipple	1		
70		COP 1032	3176 6515 00	nipple	1		
71		COP 1032	0147 1483 03	screw	2		
72		COP 1032	3115 1763 82	high pressure accumulator, comp	1		3115 2696 80
73		COP 1032	0663 2133 01	o-ring	1		
74			3176 6566 00	nipple	1		
75		COP 1032	3715 0820 00	cap	1		
76		COP 1032	3115 0796 00	regulating plug	1		
77		COP 1032	3115 1695 00	seal washer	1		
78		COP 1032	3115 0797 00	nut	1		
79		COP 1032	3115 1032 00	cylinder, compl	1		
80		COP 1032	-	-cylinder	1		
81		COP 1032	3115 1460 00	-plug	5		
82		COP 1032	0259 2061 00	-thread insert	6		
83			3115 1336 80	seal housing rear, compl	1		1.12kg
84		COP 1032	-	-seal housing, rear	1		
85		COP 1032	3115 0799 00	-piston guide, rear	1		
86		COP 1032	3115 0845 00	-set of seals	2		
87		COP 1032	0663 6134 01	o-ring	1		
88		COP 1032	3115 1335 00	back head	1		
89		COP 1032	0147 1483 03	screw	4		

No	Crawler Drill	Drfter	Part Number	Part Name	Q'ty	Unit Price	Remarks
90		COP 1032	0663 2100 63	o-ring	2		
91		COP 1032	3115 0953 00	valve cover	2		
92		COP 1032	0663 2135 01	o-ring	8		
93		COP 1032	3115 1027 00	valve liner	1		
94		COP 1032	3115 1823 00	valve plunger	1		0.38KG
95		COP 1032	0663 9158 00	o-ring	1		
96		COP 1032	3115 1179 01	shims, 0.10mm	A)		
97		COP 1032	3115 1179 02	shims, 0.15mm	A)		
98		COP 1032	0663 6143 00	o-ring	1		
99		COP 1032					
100		COP 1032	3115 1032 91	o-ring set	1		
101		COP 1032	-	set of tools	1		
102		COP 1032	3115 1112 80	-press tool	1		
103		COP 1032	3115 1112 00	--guide	1		
104		COP 1032	3115 0317 00	--screw	1		
105		COP 1032	3115 0328 00	--nut	1		
106		COP 1032	3115 0318 00	-extension	1		
107		COP 1032	3115 1113 00	-mandrel for seal ring	1		
108		COP 1032	3115 1114 00	-mandrel for seal housing	1		
109		COP 1032	3115 1115 00	-mandrel for guide	1		
110		COP 1032	3115 1116 00	-mandrel for piston guide	1		
111		COP 1032	3115 1903 00	-mandrel for roller bearing	1		
112		COP 1032	3115 1118 80	-assembly tool for valve liner	1		
113		COP 1032	3115 1118 00	--plate	1		
114		COP 1032	3115 1119 00	--screw	1		
115		COP 1032	3115 1120 00	--screw	2		
116		COP 1032	3115 1121 00	--plug	1		
117		COP 1032	3115 1122 00	--screw	1		
118		COP 1032	9000 0330 00	--nut	1		
119		COP 1032	0266 2112 00	--nut	2		
120		COP 1032	3091 0455 90	-puller	1		
121		COP 1032	3115 0329 80	-assembly fixture	1		
122		COP 1032	3115 0343 00	-wrench adapter, 24mm	1		
123		COP 1032	3115 0344 00	-wrench adapter, 32mm	1		
124		COP 1032	3115 1877 00	-assembly tool	1		
125		COP 1032	3115 0974 00	-assembly tool	1		
126		COP 1032	3115 1821 80	-filler device for accumulator	1		
127		COP 1032	3115 0646 00	-regulator for high pressure accu	1		
128		COP 1032	3115 1126 00	-assembly tool for thread insert	1		
129		COP 1032	3115 1123 00	-pin for locking the piston	1		
130		COP 1032	3115 1124 00	-washer for locking the main val	1		
131		COP 1032	3115 1898 00	-lock plate for locking the motor	1		
132		COP 1032	3115 0978 00	pressure gauge for high pressure	1		
133		COP 1032	0371 1101 00	lifting eye	1		
134		COP 1032	3115 2072 90	set of seals (damping piston seals	1		
135				parts for protection when drilling upwards			
136		COP 1032	3115 0926 00	rubber hood	1		

No	Crawler Drill	Drfter	Part Number	Part Name	Q'ty	Unit Price	Remarks
137		COP 1032	0108 1351 00	tubular pin	1		
138		COP 1032					
139			3115 1763 82	high pressure accumulator			3115 2696 80
140		COP 1032	3115 1876 00	housing	1		
141		COP 1032	3115 1822 00	diaphragm	1		0.04
142		COP 1032	3115 0263 00	plug	1		
143		COP 1032	0663 6121 00	o-ring	1		
144		COP 1032	3115 1763 00	cover	1		
145		COP 1032	3115 0262 00	valve, compl	1		0.04
146		COP 1032	-	-valve	1		
147		COP 1032	3310 4076 00	-cap	1		
148		COP 1032	0147 1483 03	screw	2		
149			3115 0839 80	hydraulic motor			
150		COP 1032	3115 0839 90	set of seals	1		
151		COP 1032	3115 0839 01	screw	6		
152		COP 1032	-	spring washer	6		
153		COP 1032	-	seal ring	1		
154		COP 1032	3115 0839 31	flange	1		
155		COP 1032	-	seal ring	1		
156		COP 1032	-	o-ring	1		
157		COP 1032	3115 0839 07	bearing race	1		
158		COP 1032	3115 0839 08	thrust bearing	1		
159		COP 1032	3115 0839 26	seal plug	2		
160		COP 1032	-	motor casing and valve	1		
161		COP 1032	3115 0839 32	drive shaft	1		
162		COP 1032	-	o-ring	3		
163		COP 1032	3115 0839 34	distributor plate	1		
164		COP 1032	3115 0839 35	orbit set	1		
165		COP 1032	3115 0839 18	cover	1		
166		COP 1032	-	washer	7		
167		COP 1032	3115 0839 20	screw	7		
168		COP 1032	-	washer	1		
169		COP 1032	3115 0839 24	drain plug	1		